

Service documentation

Receiver type series EKD 500

EKD 511 / type 1340.42 A1

EKD 512 / type 1340.42 A2

Volume 1

To go with this:

Service documentation 1340.042-91700 Su 02, Vol. 2

We reserve the right to make modifications to the construction
and design which serve the improvement and development
of our equipment without prior notice.

Order-No. of the Service documentation 1340.042-91700 Su 02

Edition 2/1989

Volume 1

ContentsPage

1.	General remarks	5
2.	Test equipment and auxiliary testing means	7
3.	Hints for dismounting and mounting	9
4.	Hints for troubleshooting	11
5.	Localization of the faulty subassembly and reestablishment of the functionality of the receiver by subassembly exchange	15
5.1.	Check "power supply section"	17
5.2.	Check "control unit"	18
5.3.	Check "frequency processing"	21
5.4.	Check "signal path"	23
6.	Repair of the faulty subassembly	26
6.1.	Power supply section 1340.039-01500	27
6.1.1.	Input and output values	27
6.1.2.	Measuring values within the power supply section	28
6.1.3.	Troubleshooting table	30
6.2.	Control unit 1340.041-01401	34
6.2.1.	Function principle	34
6.2.2.	Test and check arrangements	37
6.2.3.	Repair sequence "local operation"	38
6.2.4.	Repair sequence operation "external"	39
6.2.5.	Control computer	40
6.2.6.	Input-output logic	42
6.2.7.	Keyboard	44
6.2.8.	Digital display	47
6.2.9.	Register and interface	48
6.3.	Frequency processing	55
6.3.1.	Troubleshooting sequence	55
6.3.2.	Frequency processing - outline	56
6.3.3.	Phase-lock loop 1 (PLL1)	58
6.3.4.	Oscillator 1	60
6.3.5.	Frequency divider 1	64
6.3.6.	Oscillator 3 (PLL3)	66

ContentsPage

6.3.7.	Phase-lock loop 2 (PLL2)	70	
6.3.8.	Oscillator 2	72	
6.3.9.	Frequency divider 2	76	
6.4.	Signal path	78	
6.4.1.	Check or correction of levelling	78	
6.4.1.1.	Basic amplification "signal path 1"	78	
6.4.1.2.	Control volume "signal path 1"	78	
6.4.1.3.	Mixer - symmetry	78	
6.4.1.4.	Basic amplification "signal path 1 and 2"	79	
6.4.1.5.	Levelling "A3E"	79	
6.4.1.6.	Changing AF line levels (max +6 dBm)	79	
6.4.1.7.	Balancing "control synchronism/channel A and B, manual control	79	
6.4.1.8.	Balancing "automatic control/channel A and B"	80	
6.4.1.9.	Check "control synchronism/channel A and B, automatic control	80	
6.4.1.10.	Adjustment "control start/control element 1" (mixer 1)	80	
6.4.1.11.	Adjustment "trigger - control amplifier"	80	
6.4.1.12.	Adjustment "short-time detector"	81	
6.4.1.13.	Balancing "display E "	81	
6.4.2.	Signal path 1,	1340.041-01311 or -01312	82
6.4.2.1.	Preselector 1,	1340.041-01351	83
	Preselector 2,	1340.041-01352	
6.4.2.2.	Mixer 1,	1340.041-01353	87
	Mixer 2,	1340.041-01354	
6.4.3.	Signal path 2,	1340.041-01321 or -01322	88
6.4.3.1.	Carrier oscillator	1340.037-01355	90
6.4.3.2.	IF2/A,	1340.041-01357 or -01367	95
	IF2/B,	1340.041-01356 or -01366	
6.4.3.3.	Demodulator and AF section,	1340.039-01358	96
6.5.	F1B-demodulator,	1340.041-01258	98
6.5.1.	Check "input signal"		98
6.5.2.	Check "input band-pass"		98
6.5.3.	Check "limiter amplifier"		98

<u>Contents</u>	<u>Page</u>
6.4.5. Check "PLL"	98
6.5.5. Check "changeover switch for low passes 100/600 Bd"	99
6.5.6. Check "amplifier"	99
6.5.7. Check "evaluator circuit"	99
6.5.8. Check "line current for teleprinter"	99
6.5.9. Check "holding and capture range of PLL"	99
7. Measuring the main parameters	101
7.1. Frequency accuracy	101
7.1.1. Measuring and correcting; with standard test conditions	101
7.1.2. Check and correction on service conditions	101
7.2. Sensitivity	103
7.3. Amplification control	106
8. Components selected by the manufacturer	109
List of terms translated	110